

Extractor Set 9084

Content

Following pullers can be asambled:



1002L 135x80mm



1102 120x110mm

+



1202A 60x60mm





## 9084 set

**1304** 135x150mm

1304T 135x150mm



1404 85x150mm

1404T 85x150mm

## Instructions



- 1- Make sure the spindle is cleaned and greased before use.
- 2- Make sure the axe has a centre hole. If not use a point protector.
- 3- Make sure the jaws are evenly spread.
- 4- Apply pulling force by turning the spindle. Never hit the spindle and not use power impact wrench.
- 5- Do not keep the spindle too sticking out from the puller's body.
- 6- Always wear suitable personal protective equipment.

## DO NOT USE POWER TOOLS

## 5010 Extractor de tornillos rotos



1- Drill the screw with a bit.
2- Nail the puller with a hammer.
3- Put the knurled nut in the puller and with a wrench extract the broken screw.