


Hydraulic Press 2650 y 2655

Instructions

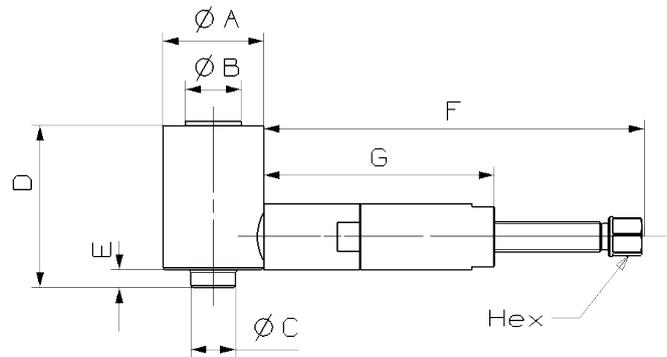

Reference	ØA	ØB	ØC	D	E	F	G	Stroke	Ton
2650	45	25	20	73	8	170	107	4	5
2655	70	25	28	82	12	208	123	2	11

Use of the press:

- 1- Turn the press screw counterclockwise until it stops.
- 2- Place the press under the puller.
- 3- Press slightly with the spindle of the puller
- 4- Tighten the press screw 3 or 4 turns.
- 5- Press with the spindle of the puller with moderate force. Through this operation the pressure will be increase inside, optimizing the performance of the press.
- 6- Tighten the press screw until the end of the stroke or until the piece comes out.
- 7- If you need more stroke, release the pressure of the press by turning left and return to step 1.

Suitable when we do not have means enough to apply load from the head of the spindle, due to lack of space or lack of user strength.

- Avoid making efforts with the spindle.
- Avoid bending the spindle.
- Makes the effect of a friction bearing

